


## How to check source lifetime and software version

1. Push the “settings” button and click on the “advanced” button

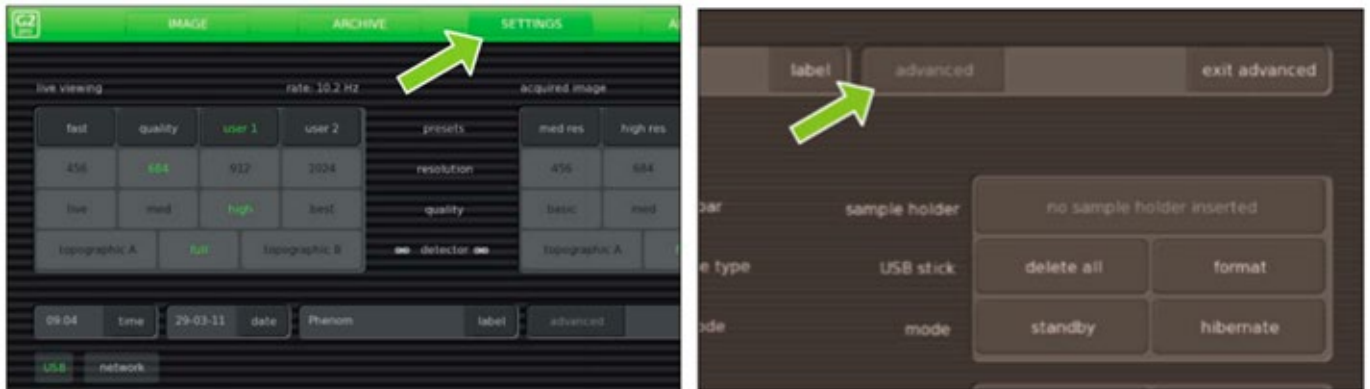

2. Input the code “expert” to activate the “advanced” menu
3. The “settings” menu now shows the source lifetime and software version:



4. Exit the “advanced” mode by pushing the “exit advanced” mode